


IMPORTANT WARNING: IT IS CRITICAL THAT ALL YAKIMA RACKS AND ACCESSORIES BE PROPERLY AND SECURELY ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR SECURING THE RACKS AND ACCESSORIES TO YOUR CAR, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR YAKIMA PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER SUCH AS A QUALIFIED GARAGE OR AUTO BODY SHOP.

Part #1033546 Rev.B



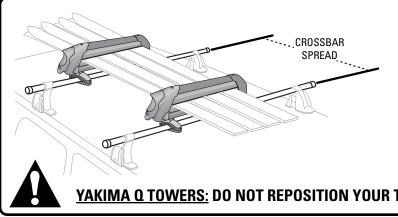


SKIS AND BOARDS UNDER 170 cm: Crossbar spread must be between 12" (30cm) and 24" (61cm)

> **SKIS AND BOARDS OVER 170 cm**:

Crossbar spread must be between 12" (30cm) and 36" (91cm)

YAKIMA Q TOWERS: DO NOT REPOSITION YOUR TOWERS!

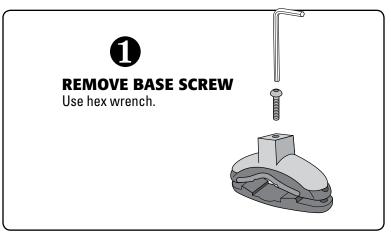



REMOVE ONE BAIL SCREW

 
- Use hex wrench.
- Loosen the remaining screw, but leave it in place.






FACTORY BARS: CHECK FOR PROPER SCREW LENGTH

- Some factory bars may require the long bail screws.
- · Screws must extend below bail.

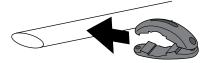

 IF SCREWS ARE TOO SHORT, **USE THE LONGER SCREWS INCLUDED**

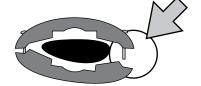

In some cases, the bails may not be parallel.




OK



WORK ON A FLAT SURFACE


Open carrier (they open two ways):

LIFT BOTTOM OF BUTTON...

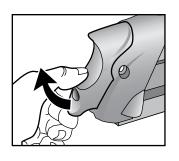



-0R-

PUSH TOP OF BUTTON...

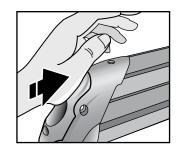

OPEN

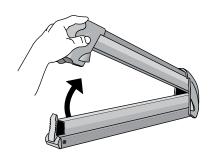

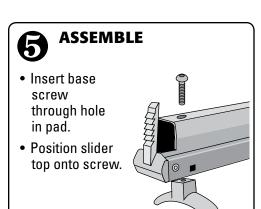




 Align the base screw with square nut (inside upper bail.)

- Use hex wrench to engage the screw and nut.
- Do not tighten yet.







REPEAT ASSEMBLY FOR REMAINING HARDWARE

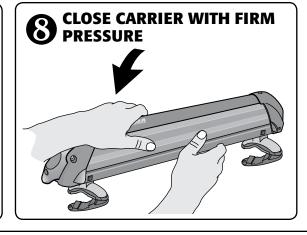




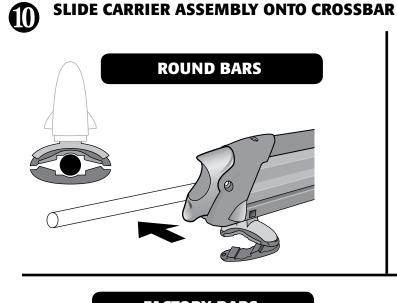

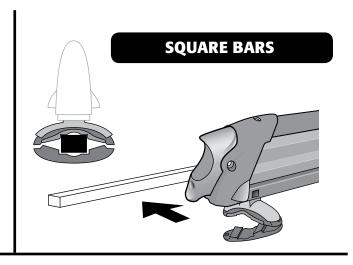

FACTORY BARS

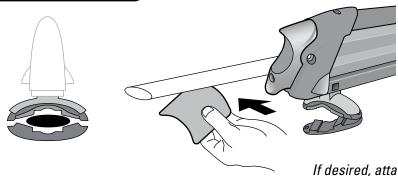



If desired, attach vinyl pads to underside of factory bars to protect finish.


1

SECURE MOUNTING ASSEMBLY


- Slide carrier to expose unsecured bail screw.
- Use hex wrench to tighten screws.

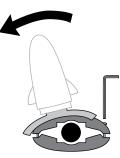 


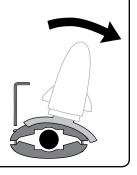

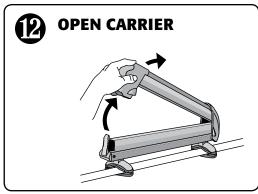




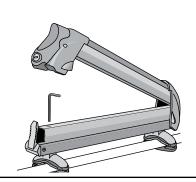

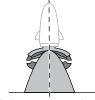

 
Make sure carriers are vertically aligned.

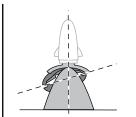

In some cases the universal mount will sit at an angle.

LOAD SKIS OR SNOWBOARDS

 - Load ski tips to the rear of your car.
- Load bindings between the carriers.

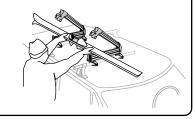




VERIFY BINDING CLEARANCE

If you have sufficient clearance,

PROCEED TO STEP 23

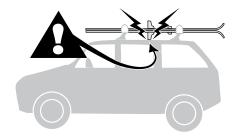

If you need more binding clearance, or if factory bars are arched and cannot align with carriers,

 
CONTINUE TO NEXT STEP FOR SKILIFT ATTACHMENT.






SKILIFT INSTALLATION: OPEN CARRIERS




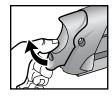


-OR-

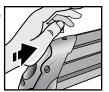 




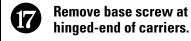 


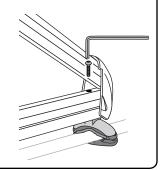





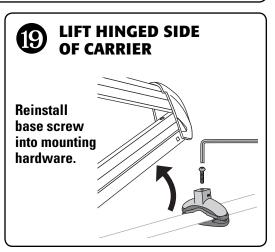

ATTACH SKILIFT TO UNIVERSAL MOUNT • Use button head screw. • Tighten with hex wrench.

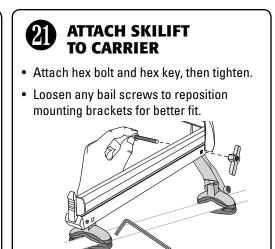


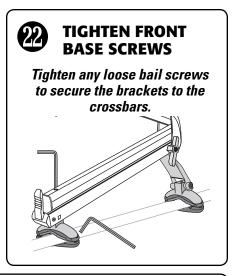

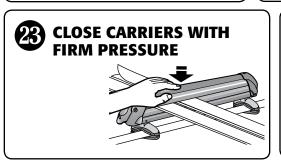





- carrier to see if the carrier can open.
- If it opens, apply more pressure when closing the carrier.

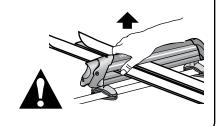



Use a key to dislodge the black plastic plug from the lock housing.

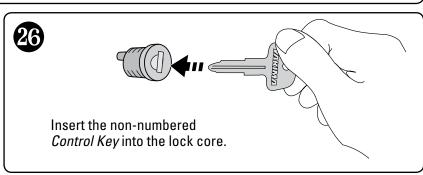

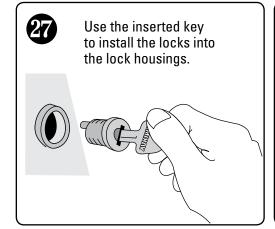




IMPORTANT


You may need to rotate the small hole inside the lock housing so that the point on the lock core will align.

On some housings, you must rotate the moving parts behind the housing.

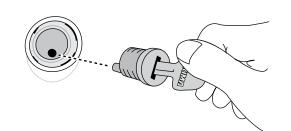



Push the core all the way into the housing. Hold the core with the tip of your thumb as you pull out the non-numbered *Control Key*. The lock should remain in the housing.

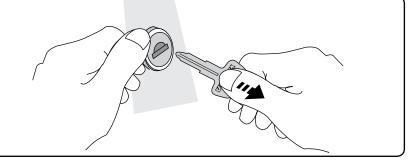



Use the locking keys to LOCK UP.



NOTE: If you wish to remove the core, the lock must be in the unlocked position, and you must use the non-numbered *Control Key*. Insert the Control Key completely to pull the core out.



*SKS refers to the Yakima Same Key System. Refer to your Yakima rack or accessory instructions for Yakima's Lifetime Warranty.

 
RECORD YOUR KEY NUMBER: (located on the set of locking keys)

Register online at www.yakima.com for Key Club Membership (to order additional matching cores or keys).





REAR HATCH

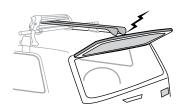

ALWAYS USE CAUTION WHEN OPENING YOUR HATCH.



VERIFY THE CLOSURE AFTER EVERY INSTALLATION AND BEFORE DRIVING AWAY.

If you remove carriers, follow instructions to reinstall.

WARNING: BE SURE ALL HARDWARE IS SECURED ACCORDING TO INSTRUCTIONS. ATTACHMENT HARDWARE CAN LOOSEN OVER TIME. CHECK BEFORE EACH USE. AND TIGHTEN IF NECESSARY.



WEIGHT LIMITS

Follow the YAKIMA Fit List or check online at Yakima.com for your rack's weight limit. Do not exceed the weight limit of your vehicle's racks.



Not more than 165 lbs. (75 kg) unless otherwise noted.

*(Some vehicles will be rated lower than 165 lbs. (75 kg))

MAINTENANCE: Use non-water soluble lubricant on screws.

Use a soft cloth with water and mild detergent to clean plastic parts.

REMOVE RACKS AND CARRIERS BEFORE ENTERING AN AUTOMATIC CAR WASH.

To extend the life of your product, remove the carrier and clean at the end of the season

TECHNICAL ASSISTANCE OR REPLACEMENT PARTS Contact your dealer or call (888)925-4621 Monday through Friday, 7:00 AM to 5:00 PM, PST



This product is covered by YAKIMA's "Love It Till You Leave It"
Limited Lifetime Warranty To obtain a copy of this warranty,
go online to www.yakima.com or email us at
yakwarranty@yakima.com or call (888) 925-4621

KEEP THESE INSTRUCTIONS!